









# Platon LPCB Fire Sprinkler Flowmeter

DS1162


## SHUNT GAPMETER MODEL LPC LPCB APPROVED DIRECT-READING FLOWMETER FOR WATER

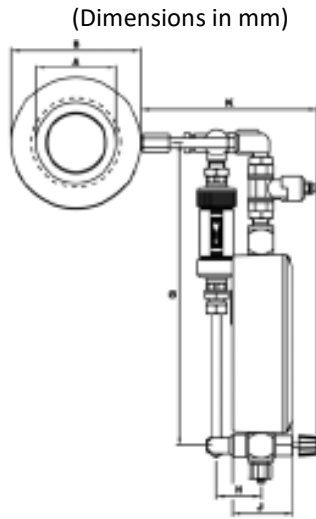

### HORIZONTAL INSTALLATIONS

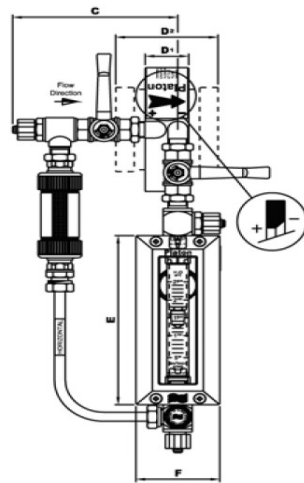


HORIZONTAL FLOW LEFT TO RIGHT

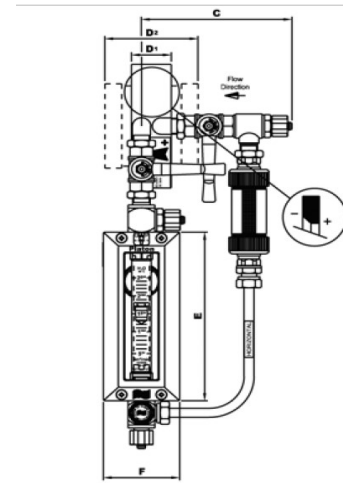


HORIZONTAL FLOW RIGHT TO LEFT

Dimension 'A' = PIPE SIZE (50, 80, 100, 150 OR 200mm)


Dimension 'B' = FLANGE BOLT P.C.D. MINUS BOLT DIAMETER

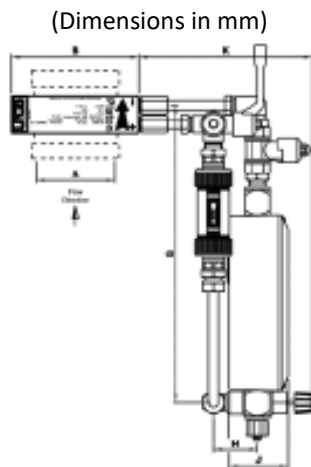

### VERTICAL INSTALLATIONS

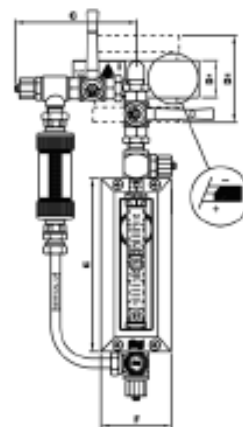

VERTICAL FLOW UPWARDS

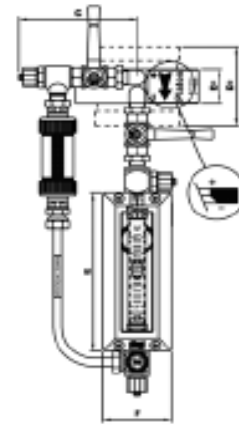

VERTICAL FLOW DOWNWARDS

For more detailed dimensions, certified drawings, operation, installation and maintenance instructions and recommended spares etc, refer to Operation and Maintenance Manual OMM 1002.

Every effort has been made during the preparation of this document to ensure the accuracy of statements and specifications. However, we do not accept liability for damage, injury, loss or expense caused by errors or omissions made. We reserve the right to withdraw or amend products or documentation without notice.



OSTWAR041



**LICO Electronics GmbH**  
lederinger Strasse 31  
A-2320 Kledering, Austria  
E-mail: sales@lico.at | office@lico.at  
Tel.: +43 1 706 4300

**LICO Mechatronik Kft.**  
Raba u. 4.  
H-2030 Erd, Hungary  
Email: sales@lico.hu / sales@lico.at  
Tel: +36 23 520 138

[www.platon-direct.eu](http://www.platon-direct.eu)