# SERIES 27100, 28000

Vertical DETECT-A-FIRE<sup>®</sup> Units Installation Instructions

# 12.01.G

## DESCRIPTION

DETECT-A-FIRE<sup>®</sup> (D-A-F) thermal detectors are UL Listed (UL of Canada available upon request), and FM Approved detection and release devices for use with fire detection systems to activate alarms and extinguishing systems. This Rate Compensated device combines the best features of both fixed temperature and rate-of-rise detectors.

## **Electrical Rating**

Model Number	Contact Operation on Temperature Rise	Electrical Rating* (Resistive Only)
12-X27120	Opens (450°F Max)	5.0 amps 125 VAC
12-X28020	Opens (450 F Max)	0.5 Amps 125 VDC
12-X27121		5.0 Amps 125 VAC
12-X28021	Closes	0.5 Amps 125 VDC 2.0 Amps 24 VDC 1.0 Amps 48 VDC

**Note:** \*Although incandescent lamps are considered resistive, their inrush current is 10-15 times their steady current. Do not exceed ratings.

## LOCATION

D-A-F detectors are precision temperature sensors. They must be mounted in an area (normally a ceiling) so that:

- 1. The detector spacing complies with both system requirements and requirements of the agency having local jurisdiction.
- 2. The thermal air path to the shell is not obstructed.

Spacing per UL, FM, and UL of Canada is shown in Table 1. Distances given are for between units on smooth ceilings. Distances from partitions or walls are half that shown. To assure that all spacing requirements are met, consult the authority having local jurisdiction.

## TABLE 1: MODEL NUMBER 12-X27120\*, 12-X27121

x	°F Setting	-		Spacings (in feet)			Color Coding
	Setting	TOIETAILCE	UL	ULc	FM		county
	140	+7/-8	50	50	20	Quick	Black
	160	+7/-8	25	25	20	Quick	Black
Е	190	+7/-8	50	50	25	Fast	White
	210	+7/-8	25	50	25	Fast	White
	225	+7/-8	25	50	25	Fast	White
	275	±10	25	50	25	Fast	Blue
F	325	±10	50	50	25	Fast	Red
	360	±10	25	50	30	V-Fast	Red
G	450	±15	25	50	30	V-Fast	Green
9	500	±15	50	50	30	V-Fast	Orange
н	600	±20	N/A	50	30	V-Fast	Orange
п	725	±20	N/A	50	30	V-Fast	Orange
Notes	:	-	•	•	-	•	

 For clean agents and CO2 suppression systems, ceiling spacing is 20 ft. apart unless otherwise specified.

• 27120 is a 2-wire device and RTI is not applicable.

 27120 is a normally closed device and does not meet the requirements of NFPA-72 for use as an initiating device.



# MOUNTING

D-A-F units are not position sensitive. Horizontal and vertical detectors refer to the most common mounting configuration for that unit. However, each type can be mounted either horizontally or vertically depending on the application and installation requirements.

	TABLE 2: MODEL	NUMBER 1	2-X28020*.	12-X28021
--	----------------	----------	------------	-----------

x	°F Setting	°F Tolerance	Spacings (in feet)			RTI	Color Coding
	Secting	rolerance	UL	ULc	FM		county
	140	+7/-8	50	50	30	V-Fast	Black
	160	+7/-8	25	25	30	V-Fast	Black
Е	190	+7/-8	50	50	30	V-Fast	White
	210	+7/-8	25	50	30	V-Fast	White
	225	+7/-8	25	50	30	V-Fast	White
	275	±10	25	50	30	V-Fast	Blue
F	325	±10	50	50	30	V-Fast	Red
	360	±10	25	50	30	V-Fast	Red
G	450	±15	25	50	30	V-Fast	Green
0	500	±15	50	50	30	V-Fast	Orange
н	600	±20	N/A	50	30	V-Fast	Orange
11	725	±20	N/A	50	30	V-Fast	Orange

Notes:

For clean agents and CO2 suppression systems, ceiling spacing is 20 ft. apart unless otherwise specified.

• 28020 is a 2-wire device and RTI is not applicable.

 28020 is a normally closed device and does not meet the requirements of NFPA-72 for use as an initiating device.

Hazardous Location	Model Number	Fitting Required For UL, ULC Listings and FM Approvals
Class 1*, Groups A, B, C and D; Class II*, Groups E, F and G	27120-22 27121-20 28020-3 28021-5	Mount detector to a suitably listed fitting in accordance with
Class 1*, Groups B, C and D; Class II*, Groups E, F and G	27120-0 27121-0 28021-0	National Electric Code and/or local authority having jurisdiction.
Note: * Division 1 and 2.		•


## INSTALLATION

- **Note:** Kidde-Fenwal recommends that standard 4-inch octagonal outlet boxes be used to mount detectors.
- 1. Attach detector to outlet box cover through a 0.875 inch diameter hole and using two 1/2-14NPT retainer nuts as indicated.
- 2. Connect system wiring to detector per Figure 1 and applicable electrical codes.
- Ordinary Locations: The D-A-F Units are to be installed in grounded metallic junction boxes only. They are to be secured to the boxes using two lock nuts, one on either side of the mounting plate. D-A-F Units are not to be installed in non-metallic junction boxes.

- Hazardous Locations: For Class I, Division 1 and 2 locations install the D-A-F Unit in a listed explosion-proof enclosure with a minimum thread engagement of five full turns. No non-conductive material is to be placed on the threaded joint of the D-A-F Unit or in the listed explosion-proof enclosure. For Division 2 locations assure that a protective ground terminal is provided in the listed explosion-proof enclosure when flexible metal conduit is used.
- Non-Hazardous Outdoor Locations: Mount the D-A-F in a Listed NEMA Type 3 outlet box, cover and conduit, with 1/2- 14 NPT threads and a minimum thread engagement of 5 full turns. Use pipe plugs with RTV silicone rubber sealant, a rubber gasket and selfsealing screws to attach the cover, and PTFE thread sealtape on the D-A-F threads. For additional requirements consult the local fire department, the National Electric Code and/or the local authority having jurisdiction in the area.
- **Note:** Do not exceed a maximum torque without thread lubricant of 20 foot-pounds (27.1 Newton Meters).

Series 28000 units are similar to Series 27100 units except they have two 1/2-14 NPT threads for mounting.

The unit may be mounted as described above or may be threaded into a 1/2-14 NPT tapped hole in the vessel wall or threaded into a coupling brazed or welded to the vessel wall.

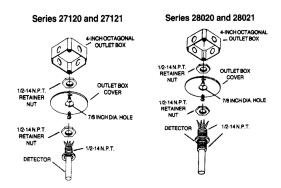


## **Field Wiring Requirement**


Field wiring must be capable of withstanding the maximum anticipated ambient temperature in the application. For Type G and H Detectors, field wiring should be capable for continuous operation at the maximum rated ambient temperature of 250°C.

## SYSTEM WIRING


#### **Typical Fire Alarm System Method**



## **Typical Security System Method**



#### DETECT-A-FIRE MOUNTING



#### TABLE 3

Non-Hazardous Outdoor Locations				
Model Number	°F Temperature Setting	Fitting Required for UL Listing and FM Approval		
12-X27120-0		Mount detector to a fitting suitable for		
12-X27120-22	140, 160,	outside use, (NEMA Type 3), in accor-		
12-X27121-0	190, 225	dance with National Electric Code and/		
12-X27121-20		or local authority having jurisdiction.		

FM requires the use of a Killark Oulet Box P/N VLJK-1, with P/N VJH-1 cover, and P/N VBNB Gasket to satisfy Outdoor NEMA 3 rated installation requirements.

#### **FUNCTIONAL TEST**

When used with automatic fire extinguishing systems first disconnect the initiator/solenoid leads from the panel and connect a 24 VDC bulb to initiator terminals in the control unit. Gently heat the D-A-F units with a heat lamp or other convenient source (see WARNING below). When the bulb in the control unit changes state, remove heat source and allow D-A-F unit to cool. Reset control unit. Test lamp must change state and stay changed after system is reset. Do not reconnect initiator/ solenoid leads until all D-A-F units have cooled below set point as indicated by test lamp. When D-A-F units are used in other types of systems, disconnect them from the system, connect a 24 VDC lamp and power source in series with the D-A-F units and test with heat source as above. Make sure that contacts have reset to normal condition before reconnecting to system circuit.

- 1. DO NOT overshoot the setpoint of the unit by more than 100F (55C). DO NOT contact the sensing shell with a heating device. Either action could result in a shift of the set point temperature or damage the unit.
- 2. Keep the sensing shell of the unit free from paint, grease, oil, etc. If a buildup occurs, do not attempt to remove the buildup. Replace the unit.
- 3. Detectors mounted in an area subject to physical abuse or damage must be suitably protected without obstructing the thermal airpath to the unit.
- 4. Do not install the unit where the shell would be physically damaged by sand, grain, rocks, etc.
- 5. Any detector that has been involved in a fire or damaged must be replaced.
- 6. Do not over torque the unit when installing.
  WARNING
  Recommended practice is to hand tighten the unit. Then using a suitable sized wrench, turn 1 1/2 additional turns without damaging the hex surfaces.
  - 7. Consult the factory for special precautions necessary for outdoor use or moist environments.

ANY OF THE ABOVE COULD CHANGE THE FACTORY TEM-PERATURE SETTING, WHICH MAY RESULT IN PROPERTY DAMAGE AND/OR PERSONAL INJURY OR DEATH. IT IS POSSIBLE FOR A UNIT TO HAVE BEEN ABUSED OR DAMAGED AND NOT DISPLAY ANY OUTWARD INDICA-TION OF THE DAMAGE. ALL UNITS SHOULD BE TESTED PERIODICALLY IN ACCORDANCE WITH NATIONAL FIRE PROTECTION ASSOCIATION REQUIREMENTS (72e) OR THE AGENCY HAVING LOCAL JURISDICTION.

DETECT-A-FIRE is a registered trademark of Kidde-Fenwal, Inc., or its parents, subsidiaries, or affiliates. Kidde is a registered trademark of Kidde-Fenwal, Inc., or its parents, subsidiaries, or affiliates.

Specifications are subject to change without notice. This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to work correctly. If you need more information on this product, or have a particular problem or question, contact KIDDE-FENWAL, INC.



Jurisdiction: EAR

©2018 Kidde-Fenwal, Inc. *EXPORT INFORMATION (USA)* 

06-L04103-000 Rev. AC

Classification: EAR99 This document contains technical data subject to the EAR.

## LICO Mechatronic Kft.

Raba u. 4. H-2030 Erd, Hungary Email: sales@lico.hu / iroda@lico.hu Tel: +36 23 520 138

## LICO Electronics GmbH

Klederinger Strasse 31 A-2320 Kledering, Austria E-mail: sales@lico.at / office@lico.at Tel.: +43 1 706 4300